

## LIMITED LIFETIME WARRANTY & INSTRUCTIONS MANUAL

### FEATURES

1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the Week.
2. Function:
  - Alarm function with buzzer signal output.
  - Chronograph function with lap operation.
  - Hourly Chime
  - 12/24 Hour (Military Time).
  - Second Time Zone
  - Water Resistant as indicated on the watch
  - INSTALITE - Electro Luminescent Display
3. Press 'A' Minutes flash. Press 'C' to advance the Minutes.
4. Normal operating temperature range: 10°C-40°C.
5. Press 'B' twice return to Time Telling Mode.

### SELECTING FEATURES

1. Time Telling Mode displays Hours, Minutes, Seconds, Date, and Day of the Week.
2. From Time Telling Mode, press 'B' once. Alarm Mode appears. Press 'B' three times to return to Time Telling Mode.
3. From Time Telling Mode, press 'B' twice. Stopwatch Mode appears. Press 'B' two times to return to Time Telling Mode.

### SPLIT TIME

1. While in Stopwatch Mode, press 'D' to start timing.
2. Press 'A' to display split time, stopwatch timing continues internally.
3. Press 'A' to clear split time and continue time measurement.
4. Repeat step 2 and 3 and you can measure the multi-split time.
5. Press 'D' to stop the stopwatch
6. Press 'A' to reset to zero.
7. Press 'B' twice return to Time Telling Mode.

### SETTING THE 24 HOUR ALARMS

1. From Time Telling Mode, press 'B' once to enter the Alarm Mode.
  2. Press 'A'. Alarm Hours flash. Press 'D' to advance the Alarm Hour.
  3. Press 'B' Alarm Minutes flash. Press 'D' to advance the Alarm Minute.
- NOTE:** Pressing and holding 'D' will advance digits rapidly.
4. Press 'A' to exit the set date.
  4. Press 'B' three times to return to Time Telling Mode.

### SETTING THE TIME AND CALENDAR


1. From Time Telling Mode, press and hold 'A'. Seconds flash. Press 'D' to zero out the seconds.
- NOTE:** Zeroing out 30 or more seconds automatically adds one minute to time.
2. Press 'B'. Hours flash. Press 'D' to advance the Hour.
- NOTE:** Pressing and holding 'D' will advance digits rapidly.
3. Press 'B' Minutes flash. Press 'D' to advance the Minutes.

### ACTIVATING ALARM + HOURLY CHIME

1. While in Alarm Mode, press 'D' to deactivate the Alarm and Chime.
2. Press 'D' again to activate the Alarm.
3. Press 'D' again to activate the Chime. The Hourly Chime symbol appears to indicate the Hourly Chime will sound every hour on the hour.
4. Press 'D' again to activate the Alarm and Chime.
5. Press 'B' three times to return to Time Telling Mode.

### DUAL TIME ZONE

1. From Time Telling Mode, press 'B' three times to enter the Second Time Zone Mode.
  2. Press 'A' Hours flash. Press 'D' to advance the Hour.
  3. Press 'B' Minutes flash. Press 'D' to adjust the Minutes.
  4. Press 'A' to end set sequence.
  5. Press 'B' to return to Time Telling Mode.
- NOTE:** Second Time Zone Clock may be used to keep track of a foreign time.

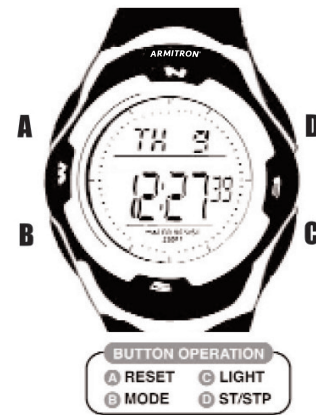

### EL LIGHT FEATURE

1. Press 'C' or the 'EL' button in any mode to illuminate the watch face. The backlight will remain lit for 3 seconds.
- NOTE:** EXCESSIVE USE OF LIGHT WILL SHORTEN BATTERY LIFE.

### CHANGING THE BATTERY

Change the battery when the watch becomes slow, the readout darkens or does not appear, or the backlight fails. Before removing the old battery, be sure to denote its polarity so that the new battery is installed in exactly the same way. Replace with the same kind or equivalent only. This watch contains precise electronic components and should only be opened by a qualified watch technician. However, it is not necessary to return your watch to the manufacturer for battery replacement. It is recommended that you bring your timepiece to a local jeweler.

### WATER RESISTANCE

This is a **WATER RESISTANT** watch. Do not operate push buttons below the surface of the water. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.

### USE OUR NATIONWIDE SERVICE CENTERS. YOU CANNOT RETURN WATCH FOR SERVICE WHERE IT WAS PURCHASED.

If your watch requires cleaning, lubrication, battery changing, or needs a crystal replaced, Armitron Adventure approved Service Centers are available in your area. These repair facilities use Armitron Adventure parts and components to assure quality and future performance. Free estimates are available in advance, should you need servicing or repairs not covered under the warranty. Repairs covered under the warranty may require proof of purchase, so retain the purchase receipt.

### RETURN YOUR WATCH FOR SERVICING

Please call **(718) 482-4195** for a listing of all approved and authorized service centers and locations, or visit our website at:

**WWW.ARMITRON.COM**

**YOUR WATCH SHOULD NOT BE RETURNED TO THE PLACE OF PURCHASE.** Carefully pack your watch in a sturdy box (do not send in a gift box for same will not be returned) and mail to the nearest approved authorized service station. Because of possible loss, we recommend that you insure the watch, return receipt requested, when using the mail. If you do not receive a receipt within a reasonable time, start a tracer through the originating post office. Never include a special watch band or any other article of personal value in your shipment.